


BLUMOTION
by Blum
SERVO-DRIVE
by Blum

AVENTOS HF – bi-fold lift system

- For wall cabinets with high, bi-fold fronts
- Little space needed above cabinet
- Can be used with fronts of different heights

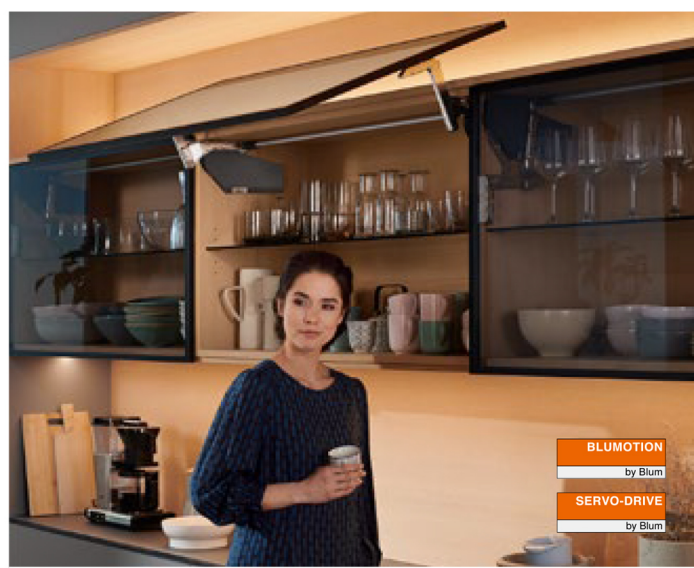

BLUMOTION
by Blum
SERVO-DRIVE
by Blum

AVENTOS HS – up & over lift system


- For wall cabinets with large, one-part fronts
- The lift system swings up and over the cabinet
- Can be combined with cornice or crown moulding



BLUMOTION
by Blum
SERVO-DRIVE
by Blum

AVENTOS HL – lift up


- For tall and wall cabinets with small, one-part fronts
- Suitable for use with overlying fronts
- Conceals devices behind a continuous front

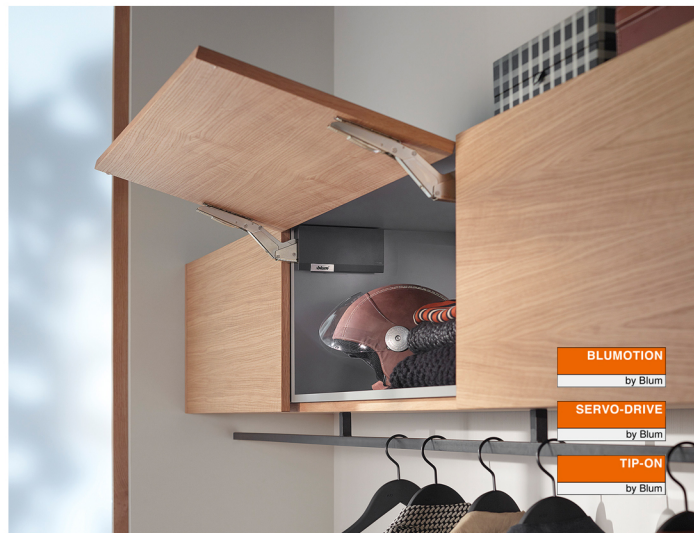

BLUMOTION
by Blum
SERVO-DRIVE
by Blum
TIP-ON
by Blum

AVENTOS HK top – stay lift

- For wall cabinets with heavy fronts
- Little space needed above cabinet
- One-part fitting and no hinges required

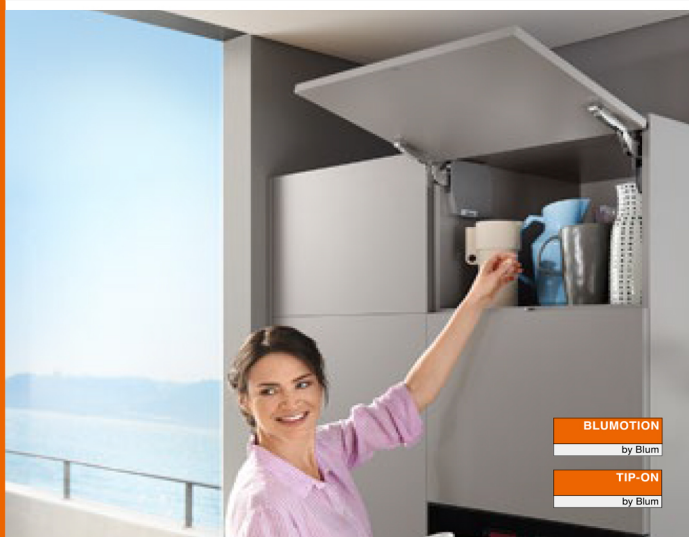

BLUMOTION
by Blum
TIP-ON
by Blum

AVENTOS HK-S – small stay lift

- For wall cabinets with small fronts
- The lift mechanism fits harmoniously into small cabinets
- One-part fitting and no hinges required



BLUMOTION
by Blum
TIP-ON
by Blum

AVENTOS HK-XS – small stay lift

- For small tall and wall cabinets
- Also for shallow depth cabinets
- Small fitting that can be used on one or both sides