

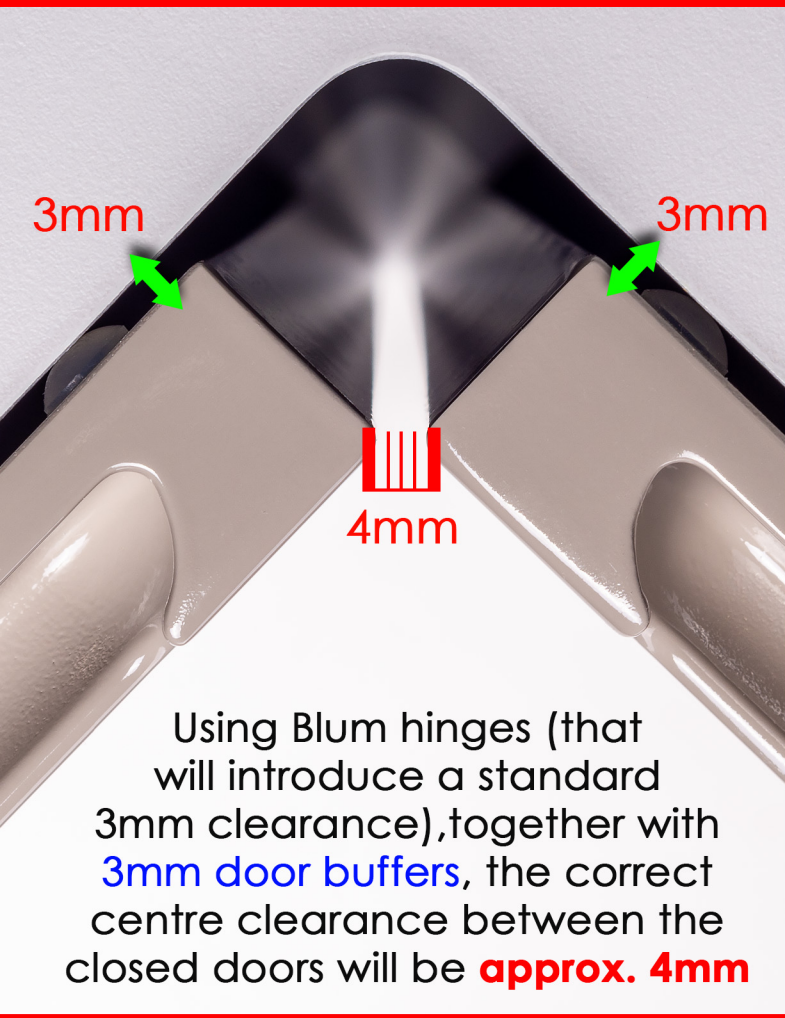



# L Shape Cabinet Door Guidance

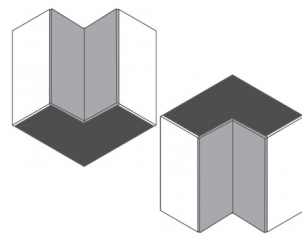

Using Blum hinges (that will introduce a standard 3mm clearance), together with 3mm door buffers, the correct centre clearance between the closed doors will be **approx. 4mm**

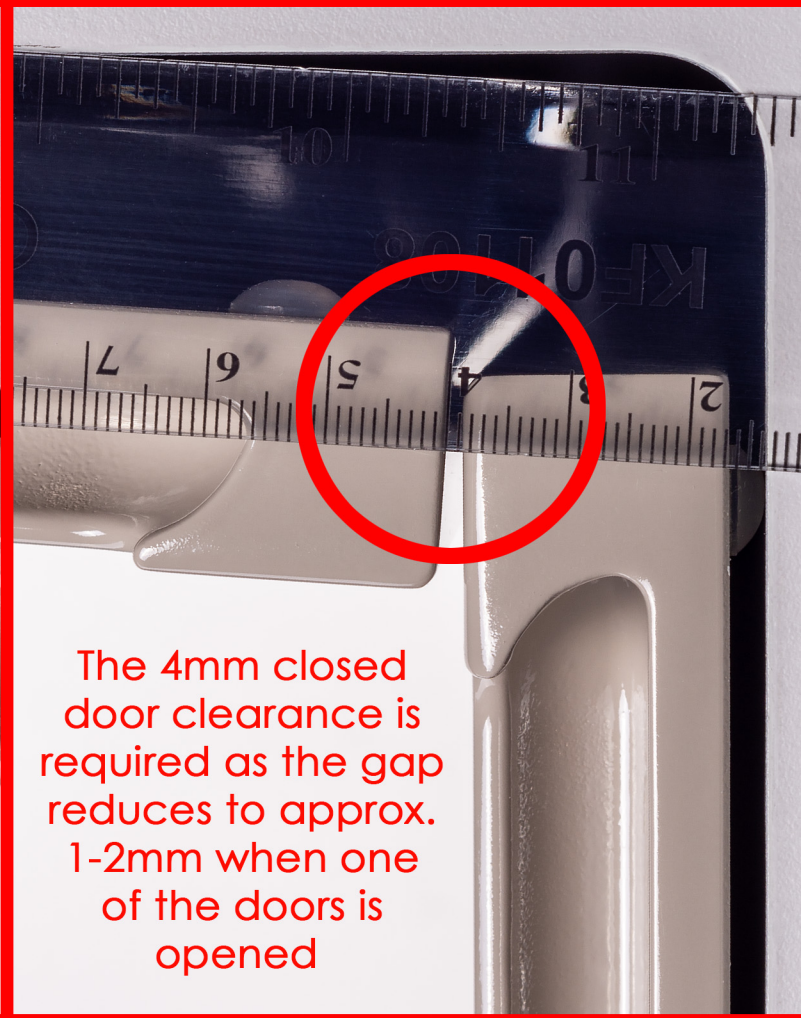

The 4mm closed door clearance is required as the gap reduces to approx. 1-2mm when one of the doors is opened

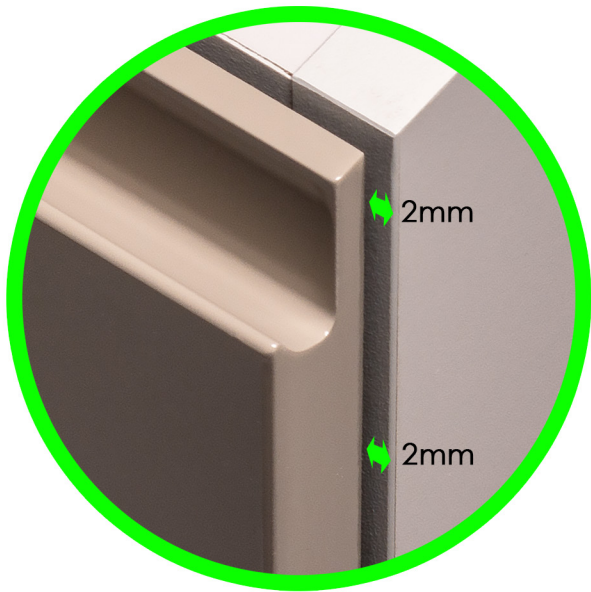

Doors should be set **2mm** in from the edge of the unit to introduce the necessary 4mm centre clearance

