


Worktops Installation Kit – 25 mm and 38 mm

Kit Contents

- 1 x EGGERSeal 20g + applicator/scrapper
- 3 x EasiBolts
- 3 x Jointing Biscuits

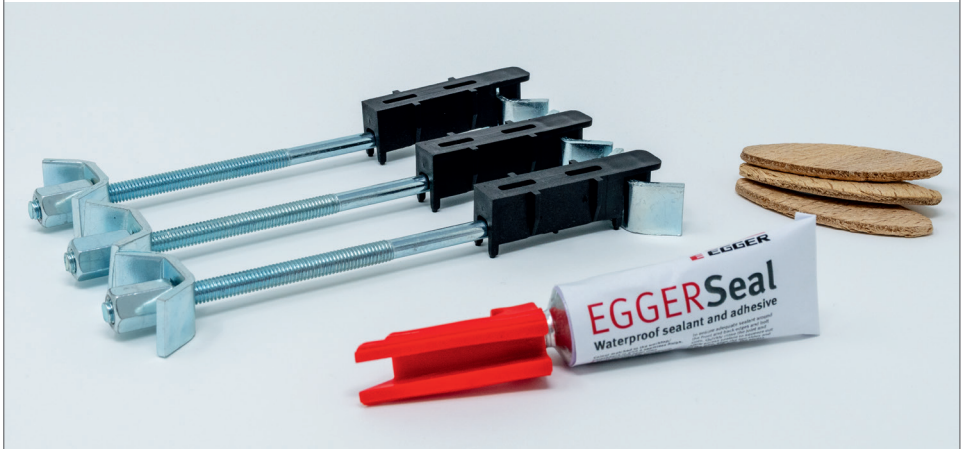

EGGERSeal

Colour matched to the worktop, splashback and upstand to give a seamless and waterproof finish.

- 10–15 minutes open time (fully cured in 15hrs)
- 12 months shelf life (unopened)
- Store in a dry location up to 25°C

Cleaning

Use the EGGERSeal applicator/scrapper then a soft dry lint free cloth. Use solvent cleaner only for stubborn, engrained or cured residue.

DO NOT use IPA Alcohol or IMS Spirits eg. Wet Wipes etc.

EGGER Worktops 10 Year Guarantee



EGGER Worktops have a 10 year guarantee when fitted using EGGERSeal adhesive and in conjunction with the fitting guide (provided in the installation kit). For more information visit


www.egger.com/worktops-accessories

Fitting Guide

Directions for use (38 mm Postformed and 38 mm / 25 mm Square Edge Worktops):

Once the joint has been mitred, cut three EasiBolt and three Jointing Biscuit slots. The worktops should be dry fitted first to ensure the joint is acceptable. Once confirmed the final jointing process can begin.

Ensure the area to be sealed is dry and free from dust and grease. Add a bead of EGGERSeal to the edge of the jointing biscuits and position in place on one side of the worktop joint.

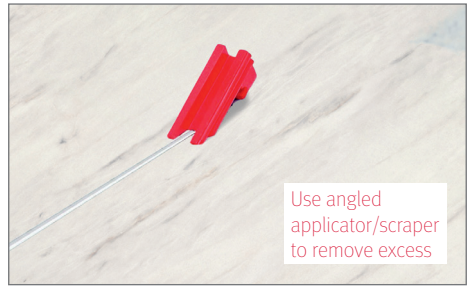

600 mm/670 mm Deep Worktops

Starting from the rear bolt slot and using the applicator to guide, apply a constant bead of EGGERSeal along the underside, up the back edge, along the top edge, down the front edge and along the underside to the rear bolt slot. Ensure all of the edges are sealed and that there is no gaps in the EGGERSeal.

920 mm Deep Worktops

Starting from the rear bolt slot and using the applicator to guide, apply a constant bead of EGGERSeal along the underside, up the back edge, along the top edge and round to the front bolt slot only. Ensure all of the edges are sealed and that there is no gaps in the EGGERSeal.

EasiBolt holder

Place the EasiBolt over the head of the bolt so that it holds the bolt head and washer together and stops the bolt from spinning. Push the EasiBolt into the side of the bolt slot that will be the least accessible once the worktop is in place above the cabinet frame.

The EasiBolt will then hold the bolt in place leaving the fitter with both hands free for levelling and tightening.

Bring the joint together and, before tightening the EasiBolts, ensure that the worktop is level along the full length of the joint.

Tighten the bolts fully so that the excess EGGERSeal squeezes out the top of the joint. Remove the excess using the angled scraper side of the applicator.

Cleaning: Using a lint free cloth, remove any further excess by wiping across the joint at 90° whilst applying moderate pressure. For stubborn residue use solvent cleaner only.

An EGGER fitting jig is available separately. This will ensure a discreet joint.

