

Figure 1. Present setup with WSD-XF+



Figure 2. Picture showing new filter in packaging WSD-XFK +



Figure 3. Remove white cap and blue covers from new filter. If the cap & covers are already removed from the filter and the white push fitting elbows are already assembled, please skip to figure &.



Figure 4. New filter with covers and caps removed. Note IN and OUT connection Markings.

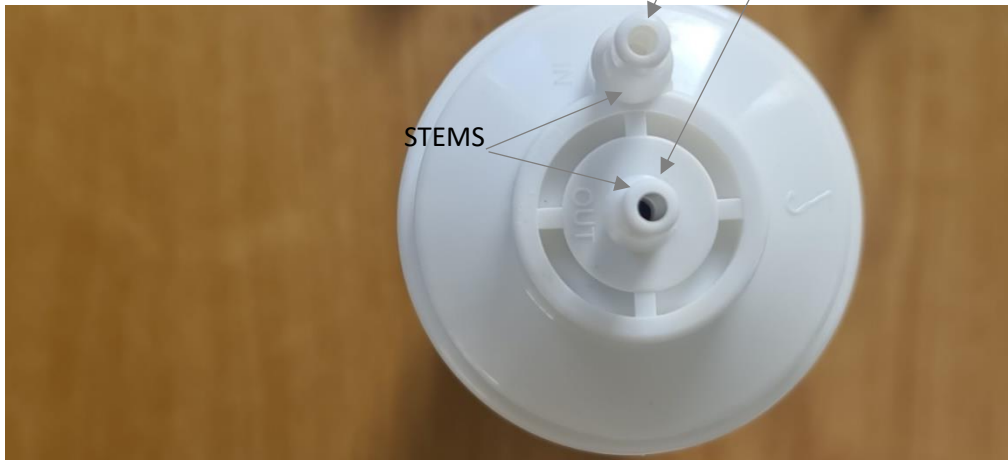


Figure 5. Push smaller diameter of elbow push fit fittings fully on to the IN and OUT stems of the filter (will feel click when fully inserted into position on the filter) as shown below



Figure 6. Push back grey ring and pull flexi hoses to remove from installed filter.



Figure 7. remove current filter bracket from cupboard if in use.

Figure 8. Fit flexi hose from tap with orange label to the inlet on the new water filter.

Pressing in firmly until feel click into position.



Figure 11. Fit white label flexi tail to the OUT connection on the new water filter to connect to boiler inlet



Figure 12. Attach the new bracket to cupboard in place of old bracket in the same screw hole if bracket is to be attached. New bracket attached photo attached.



Figure 13. Push filter into bracket if bracket is being used.

Figure 14. Final assembly picture of new filter fully installed



Please note when turning back on tap to use check no leaks at any connections.